




ART. 03.10 - Rif. Norma/Standard: IEC 529

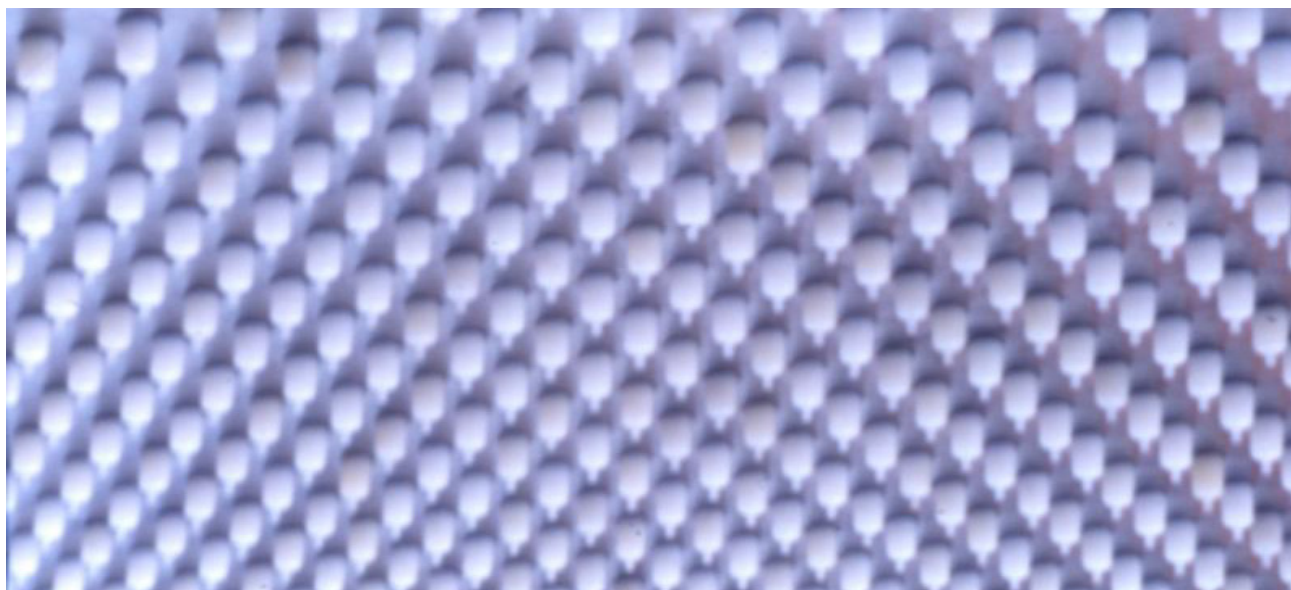

APPARECCHIATURA PER LA VERIFICA DELLA PROTEZIONE CONTRO LE GOCCE D'ACQUA

Questa apparecchiatura viene costruita sulla base della fig. 3 della norma IEC 529, con una bacinella dalla quale una serie di ugelli lasciano fuoriuscire una determinata quantità di acqua simulando la pioggia, verifica la protezione contro la caduta delle gocce d'acqua (gradi IP seconda cifra caratteristica 1 e 2).

L'apparecchio viene costruito in diverse dimensioni e forme, secondo le specifiche richieste dai clienti.

EQUIPMENT TO VERIFY PROTECTION AGAINST WATER DROPS

This equipment is manufactured according to figure 3 of the IEC 529 Standard with a small basin from which a series of nozzles eject a determined quantity of water simulating rain in order to verify protection against falling drops of water and to determine the second characteristic numeral 1 and 2 of IP degree.

This equipment is manufactured in different dimensions and shapes according to customer's specifications.

