


PROPRIETARY AND CONFIDENTIAL



THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF
DYTRAN INSTRUMENTS INC. ANY REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF DYTRAN INSTRUMENTS INC. IS PROHIBITED

REVISIONS


REV	ECN	DESCRIPTION	BY/DATE	CHK	APPR
B	12932	REDRAWN IN SOLIDWORKS	RA, 09/09/16	EM	LN
C	14138	SEE ECN	MH, 04/04/18	EM	EM

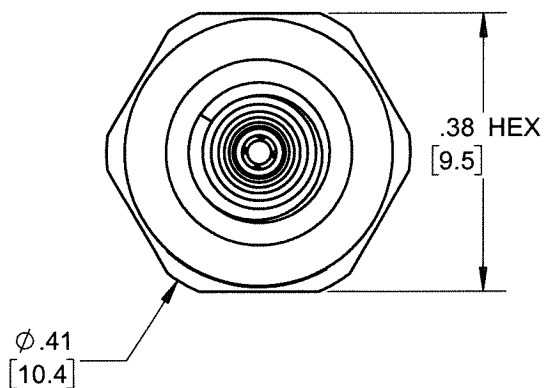

VIEW A-A
SCALE 4 : 1

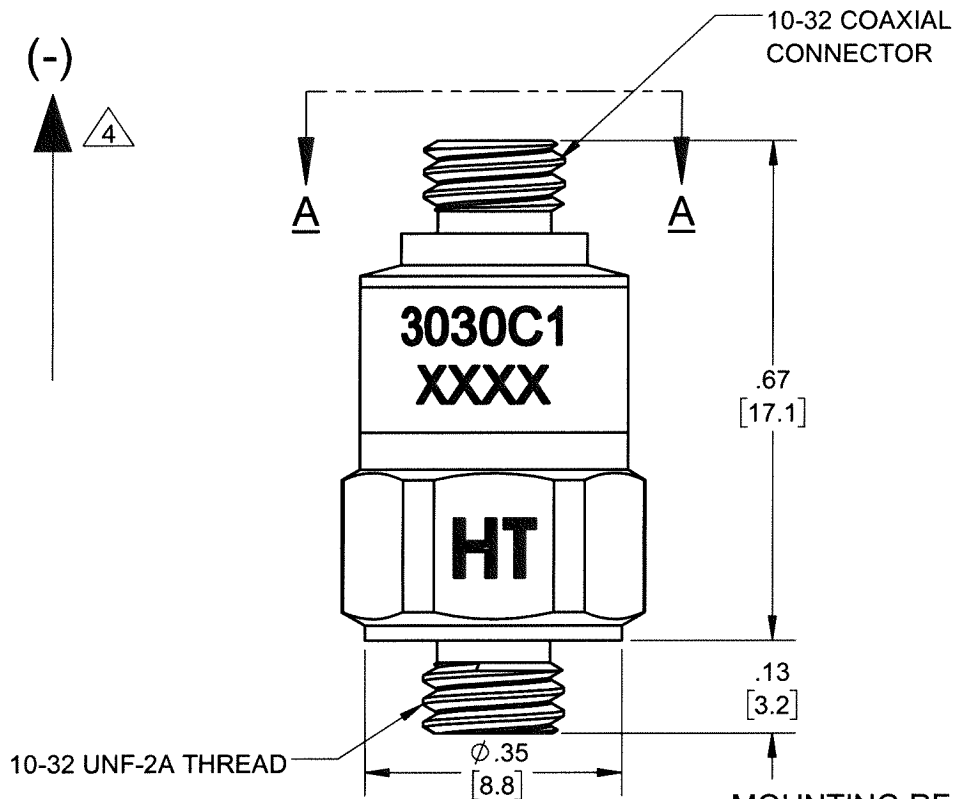

MOUNTING RECOMENDATIONS: PREPARE FLAT MOUNTING SURFACE $\phi .50$ [12.7] MIN, FLAT TO .001 TIR. DRILL AND TAP 10-32 UNF-2B $\nabla .15$ [3.8] MIN. RECOMMENDED MOUNTING TORQUE: 15 LB IN +0/-5 LB IN

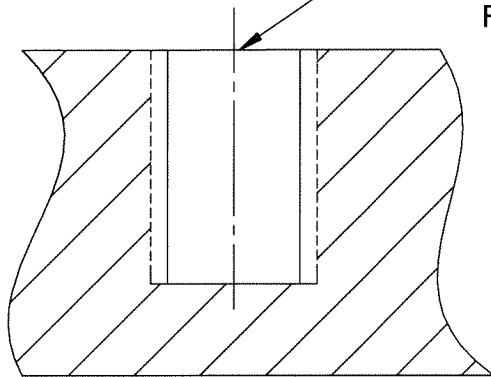

- 4 ARROW INDICATES SENSE AND DIRECTION OF ACCELERATION FOR NEGATIVE - GOING OUTPUT SIGNAL
- 3 PREPARE FLAT SURFACE TO THIS DIA. WITH A FINISH OF $\sqrt{63}$ OR BETTER AND FLAT TO .001 TIR.
- 2 PREPARE MOUNTING SURFACE AS SHOWN. APPLY A LAYER OF SILICONE GREASE TO MOUNTING SURFACE. TORQUE IN PLACE WITH 15 LB-IN.

1. HOUSING MATERIAL: 316L STAINLESS STEEL

NOTES: UNLESS OTHERWISE SPECIFIED

UNLESS OTHERWISE SPECIFIED:
INTERPRET DIM & TOL PER
ASME Y14.5M - 1994.
REMOVE BURRS.
COUNTERSINK INTERNAL THDS
90° TO MAJOR DIA.
CHAM EXT THDS 45° TO MINOR DIA.
THD LENGTHS AND DEPTHS ARE FOR
MIN FULL THDS.
DIMENSIONS APPLY AFTER FINISHING.

ALL MACHINED SURFACES.
TOTAL RUNOUT WITHIN .005.
BREAK SHARP EDGES .005 TO .010.
MACHINED FILLET RADII .005 TO .015.
WELDING SYMBOLS PER AWS A2.4.
ABBREVIATIONS PER MIL-STD-12.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES.
DIMENSIONS IN BRACKETS [] ARE IN
MILLIMETERS TOLERANCES ARE:

DECIMALS	METRIC	ANGLES
.XX ± .03	X ± 0.8	± 1°
.XXX ± .010	.XX ± 0.25	

APPROVALS		DATE
ORIG	NC	11/16/98
CHK	RA	08/26/03
APP	NC	08/26/03

DO NOT SCALE DRAWING



Chatsworth, CA

TITLE: **OUTLINE/INSTALLATION
DRAWING, MODEL 3030C1**

SIZE B	CAGE CODE 2W033	DWG NO 127-3030C1	REV C
------------------	---------------------------	-----------------------------	-----------------

SCALE: 2:1 SHEET 1 OF 1

MODEL NUMBER 3030C1		PERFORMANCE SPECIFICATION				DOC NO. PS3030C1		
		Accelerometer, Charge Mode			REV D, ECN 14401, 08/09/18			
		• HERMETICALLY SEALED • ROBUST DESIGN • LIGHTWEIGHT						
PHYSICAL		ENGLISH		SI				
Weight		0.24 oz		7.2 grams				
Connector [1]		10-32		10-32				
Housing		300 Series S.S.		300 Series S.S.				
Mounting Provision		17-4 PH		17-4 PH				
Sensing Element		10-32 UNF-2A		10-32 UNF-2A				
		Ceramic		Ceramic				
		Compression		Compression				
PERFORMANCE								
Sensitivity, +30%/-10% [2]		0.40 pC/g		0.04 pC/m/s^2				
Acceleration Range		[3] Gpeak		[3] m/s^2 peak				
Frequency Range		[5] to 5000 Hz		[5] to 5000 Hz				
Resonance Frequency		30 kHz		30 kHz				
Linearity [4]		±1 %		±1 %				
Transverse Sensitivity Max		5 %		5 %				
ENVIRONMENTAL								
Shock Max		3000 g pk		29430 m/s^2				
Vibration Max		1000 g pk		9810 m/s^2				
Operating Temperature		-148 to +450 °F		-100 to +232 °C				
Seal		Hermetic		Hermetic				
ELECTRICAL								
Capacitance, nom		126 pF		126 pF				



21592 Marilla Street, Chatsworth, California 91311 Phone: 818.700.7818 Fax:818.700.7880 www.dytran.com For permission to reprint this content, please contact info@dytran.com